

1.

(),).

2.

3.

4. 1000

90 / .

1. « - »

12

8.8.

2.

3.

,

VIN

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 7010 А
для автомобилей
Volvo XC90**

	2002/3...
	2000
	75
	23,1



462800,

18

.. (35363) 7-05-06

/ .. (35363) 7-13-20



(495) 785-66-07

www.bosal-autoflex.ru

" " "(8182) 22-48-15
" " 8(8442) 98-74-98
" " " (343) 379-39-89, 373-42-73
" " " (343) 26-88-308
" " 8(3952) 710-194
" " 8(495) 777-54-59
" " 8(495) 745-79-11
" " 8(495) 788-95-97
" " 8(495) 720-51-03
" " 8(3532) 57-99-85
" " 8-905-899-5012
" " " 8(383) 291-59-60
" " " 8(831) 279-53-24
" " 8(3422) 98-27-20
" " " 8(342) 220-87-87
" " " 8-927-002-90-06
" " " 8(3462) 24-00-44
" " " 8(3842) 21-14-76
" " " 8-902-940-4151
" " " 8(3452) 32-22-12, 41-52-62
" " " 8-961-213-0278
" " " 8-917-347-1700
" " " 8(351) 269-44-75, 900-72-73
" " " 8(3512) 773-76-91

41.55-2005.

1		
2		-
3		
4		
5		
6		-
7		

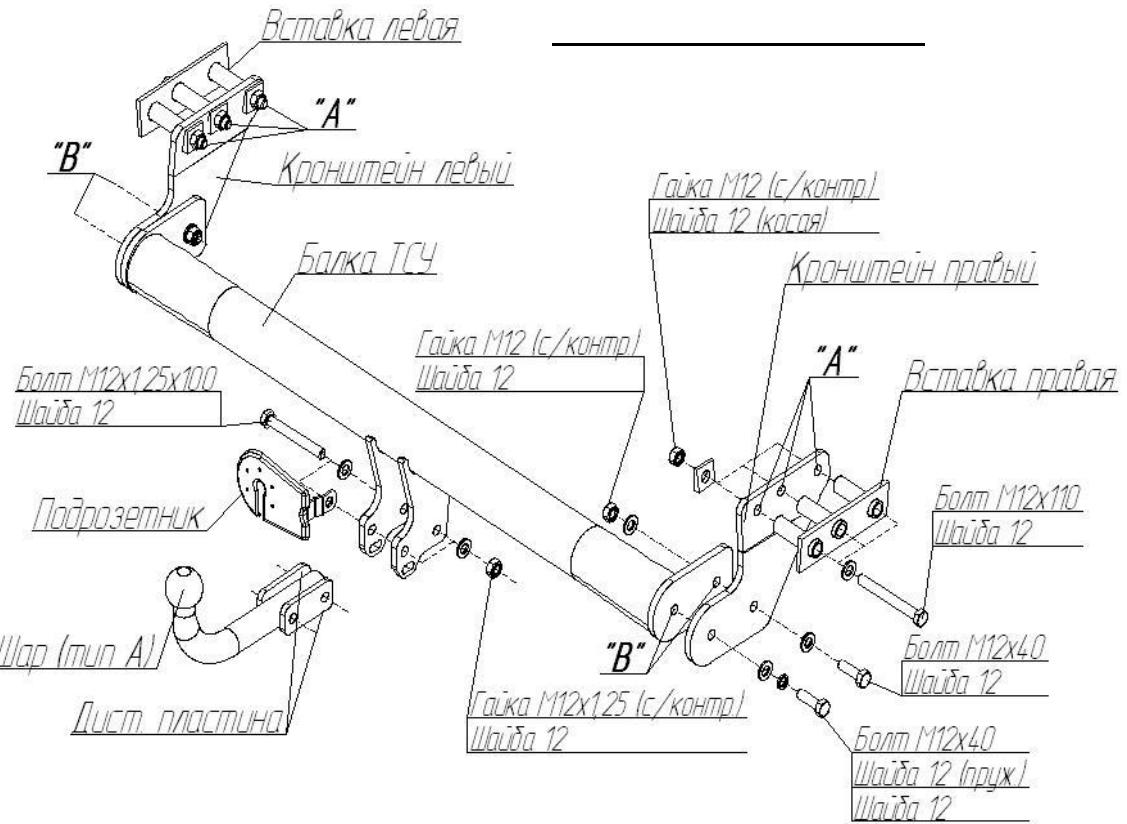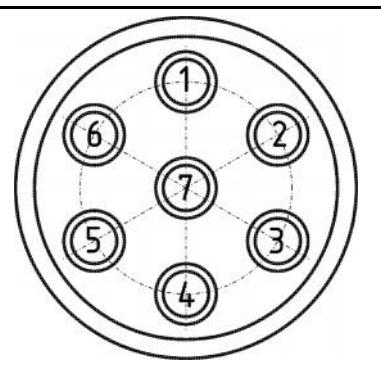

	1 .
	1 .
	1 .
	1 .
	1 .



	3 .
12 40	4 .
12 1,25 100	2 .
12 110	6 .
12 (/ .)	8 .
12 1,25 (/ .)	2 .
12 (.)	2 .
12 (.)	6 .
12	16 .
	1 .
	1 .
	2 .
VH0212	1 .
	1 .
	1 .
190	1 .
	1 .
	1 .