

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 1912 А  
для автомобилей  
Skoda Fabia  
4дв, Combi, VAN**

	2000-...
	1200
	75
	17,8



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20

т. (495) 785-66-07

[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

18


« - - »:	8(8442) 98-74-98
" - - "	8(343) 379-39-89, 373-42-73
" - - "	8(343) 26-88-308
" - - "	8(3952) 710-194
" - - "	8(495) 777-54-59
" - - "	8(495)745-79-11
" - - "	8(495) 788-95-97
" - - "	8(495) 720-51-03
" - - "	8(3532) 57-99-85
" - - "	8-905-899-5012
" - - "	8(383) 291-59-60
" - - "	8(831) 279-53-24
" - - "	8(3422) 98-27-20
" - - "	8(342) 220-87-87
" - - "	8-927-002-90-06
" - - "	8(3462) 24-00-44
" - - "	8(3842) 21-14-76
" - - "	8-902-940-4151
" - - "	8(3452) 32-22-12, 41-52-62
" - - "	8-961-213-0278
" - - "	8-917-347-1700
" - - "	8(351) 269-44-75, 900-72-73
" - - "	8(3512) 773-76-91

..... : .....

..... VIN .....

.....

.....

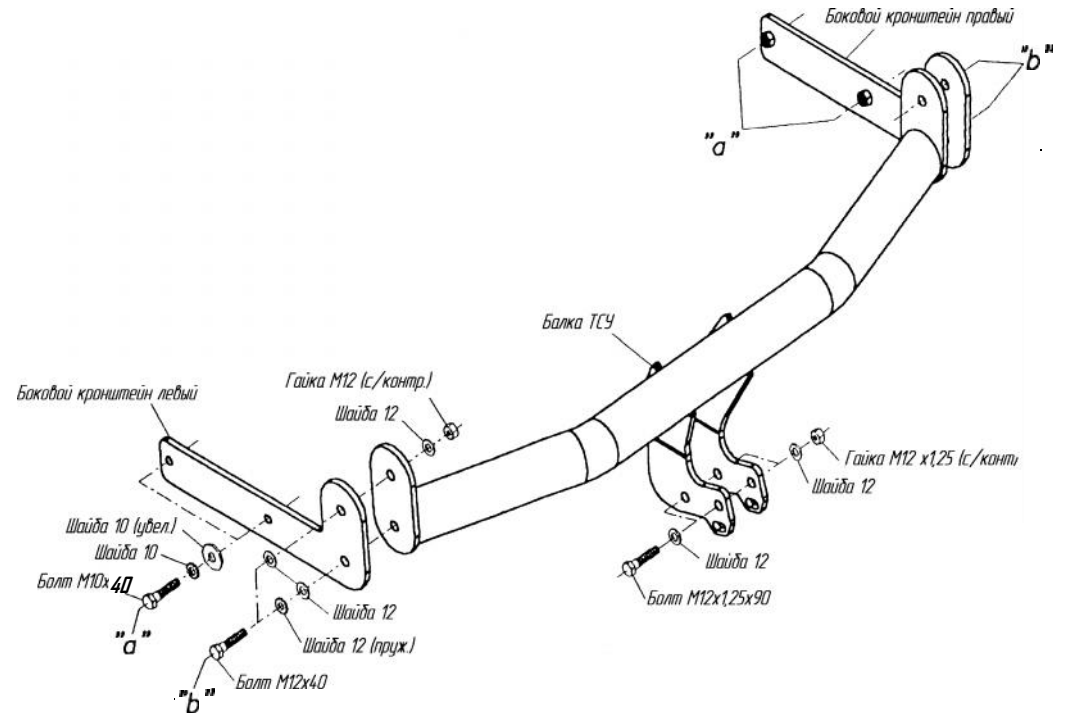

	1 .
	1 .
	1 .
	1 .
	1 .

	12 1,25 /	2 .
	12 /	2 .
	12	10 .
	12	2 .
	10	4 .
	10	4 .
	12 90 1,25	2 .
	12 40	4 .
	10 40	4 .
		2 .
	VH 0148	1 .
		1 .
		1 .
		1 .
	130	1 .
		3 .
		1 .
		1 .

