

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 4710 А для автомобилей **BMW X5**

	2000 - 2007/2
	1500
	75
	16,6



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20

(495) 799-13-46


www.bosal-autoflex.ru

www.bosal.com

18


« - »	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495) 745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91

41.55-2005.

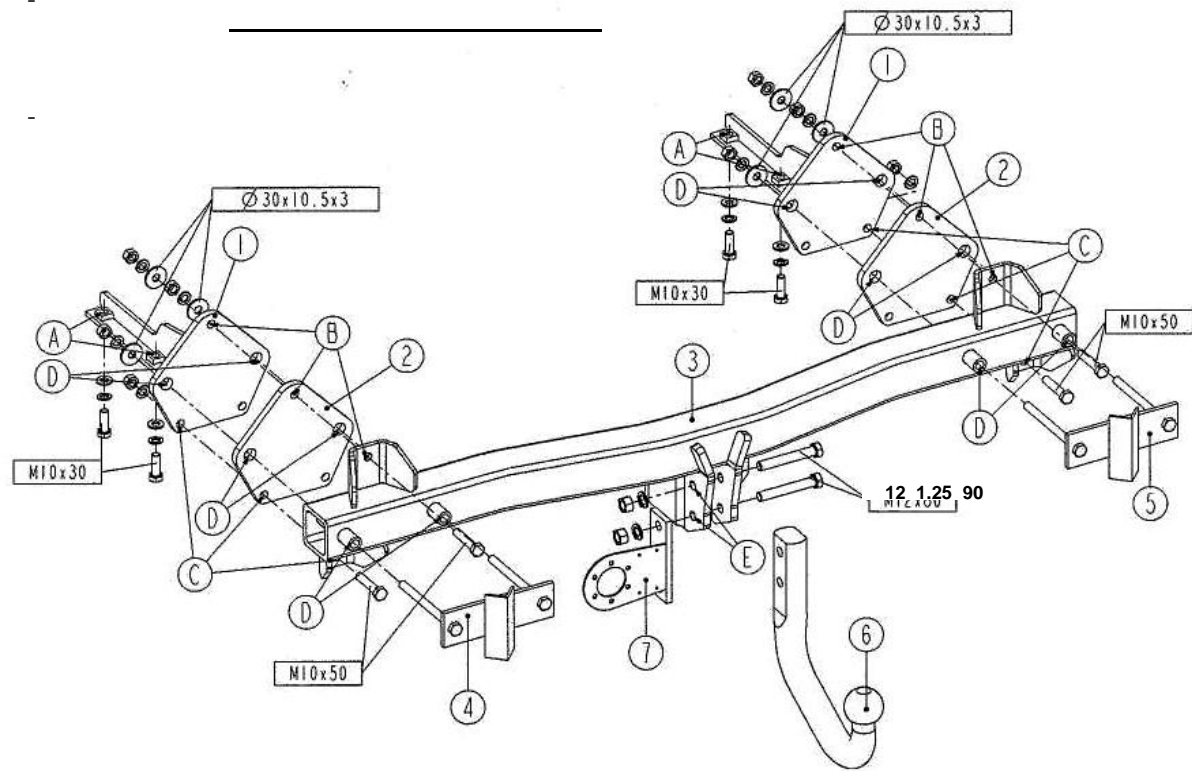

“1”
10 30,
«1» «2»
«4»

1		
2		
3		
4		
5		
6		
7		

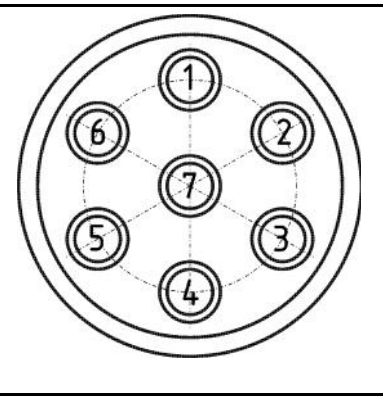

	1
	1
	1
	2
VH0817	1
	1
	1

10 30	4
10 50	4
12 1,25 90*	2
10 (/)	8
12 1,25 (/)	2
10	4
10	4
10	6
12	4
	1
	1
190	1
	1

