

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 3958 F для автомобилей **Ford Ranger**

: Ford Ranger	2007-...
	2000
	100
	23



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20



(495) 785-66-07

www.bosal-autoflex.ru


18

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

« » « ». « », d=13
 «4» «5» « » 10 35,
 « »
 « ».
 «G»
 8 30 12 35 «D»

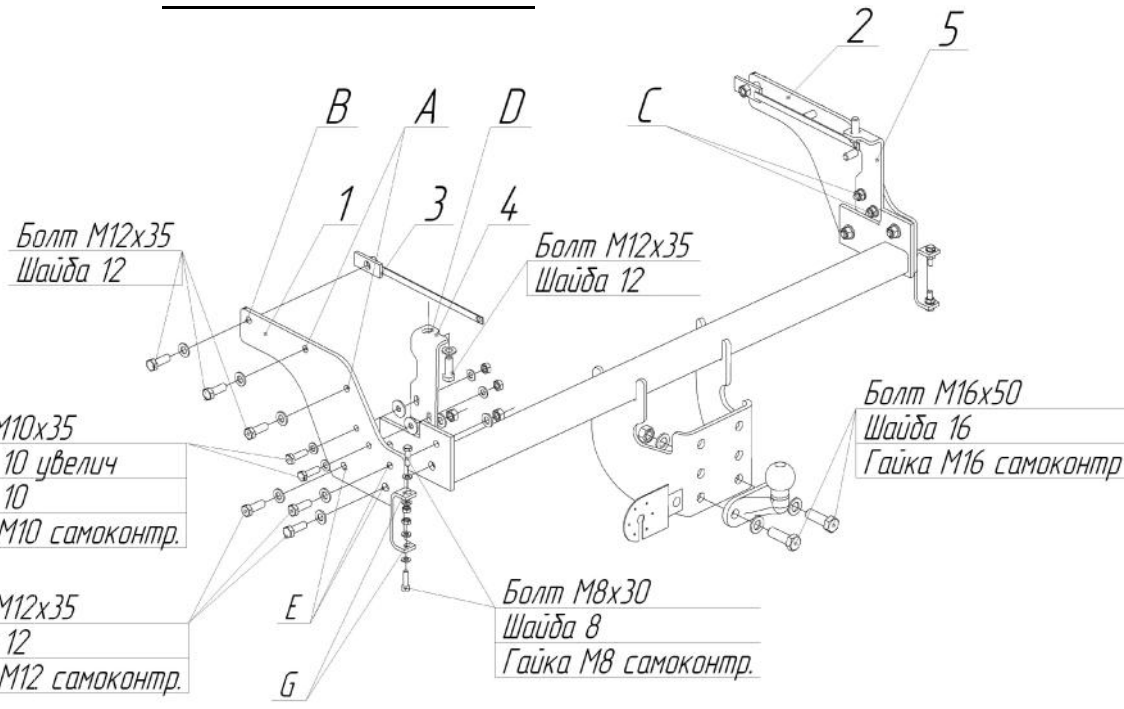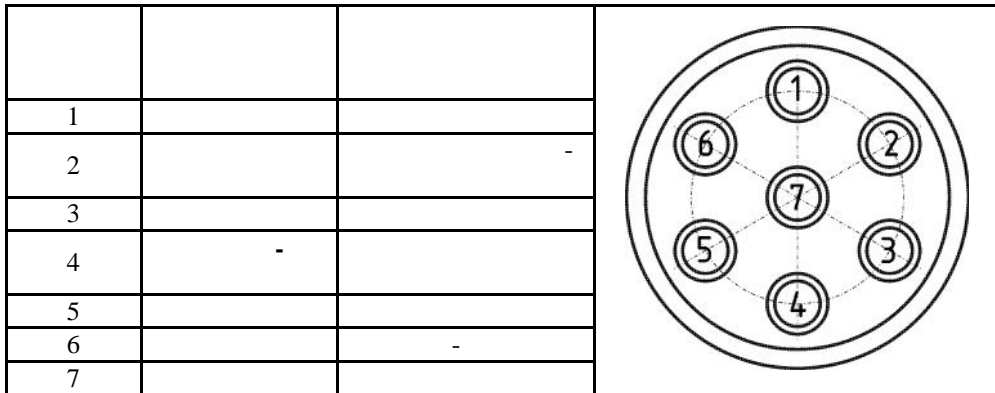

	1
	1
	1
	1
	1
	1

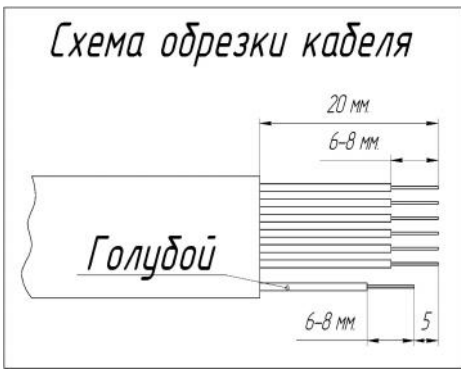

16 /	2
8 /	4
10 /	4
12 /	4
16	4
10	4
12	14
10	8
8	8
16 50	2
12 35	14
10 35	4
8 30	4
	3
	2
	2
F	1
	1
	1
190	1
	1