

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.

16 50	2 .
12 90	8 .
12 40	4 .
16 (/ .)	2 .
12 (/ .)	10 .
16	4 .
12	22 .
12 (.)	2 .
VH 0049	1 .
0169	1 .
	1 .
	1 .
I=53	8 .








	1 .
	1 .
	1 .
	2 .


<i>Момент затяжки</i>	
M6	9,5 Nm
M8	23 Nm
M10	46 Nm
M12	79 Nm
M14	125 Nm
M16	195 Nm
M10x1,25	49 Nm
M12x1,25	87 Nm
M12x1,5	83 Nm

462800, « - »
 18
 : (35363) 7-05-06
 / : (35363) 7-13-20
 (495) 799-13-46
 www.bosal-autoflex.ru
 www.bosal.com
 info@bosal-autoflex.ru



.....
.....	VIN
.....

-	39 77 F Ford Transit Chassis Cab  2012 ⇨	 				D	

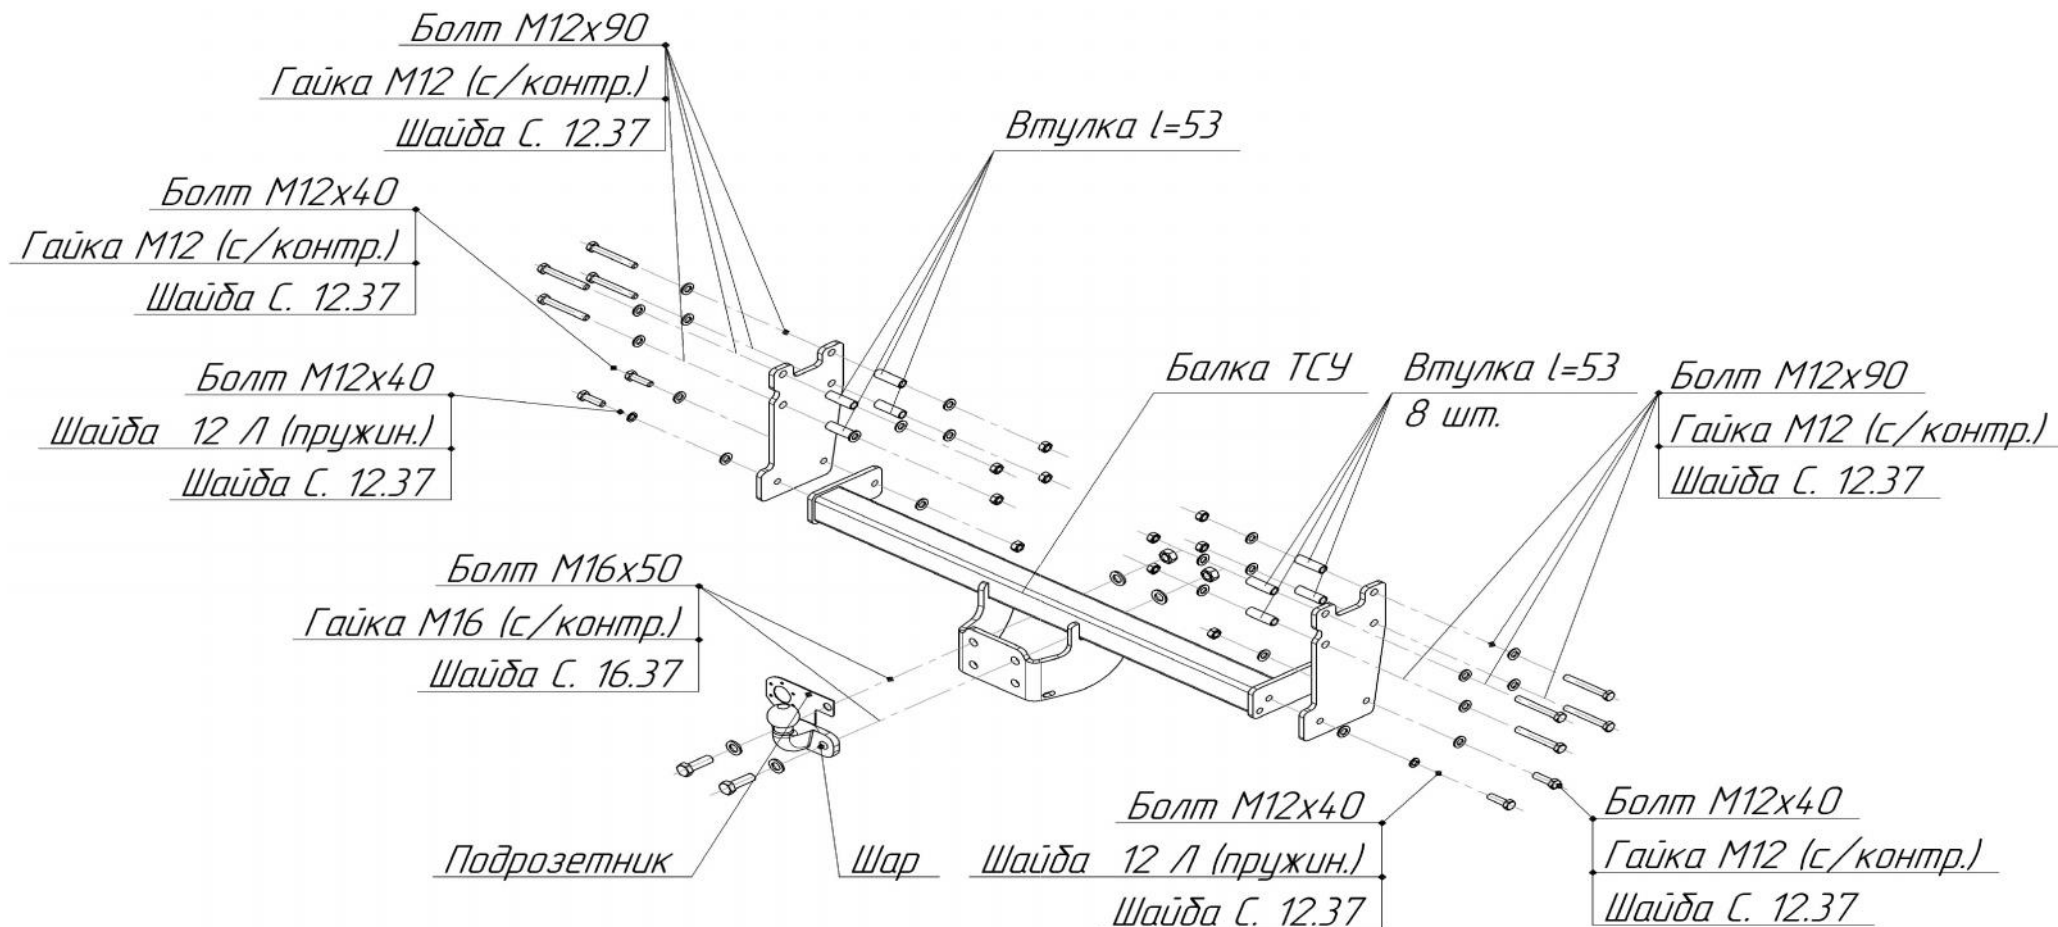

bosal