

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 6737 А
для автомобилей
Kia Cee'd НВ
Hyundai i30 НВ ; Arnejs НВ**

	2006 -...
	1200
	75
	15.56




462800,

« - »
18
: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 799-13-46
www.bosal-autoflex.ru
www.bosal.com

« - »	(8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495) 745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

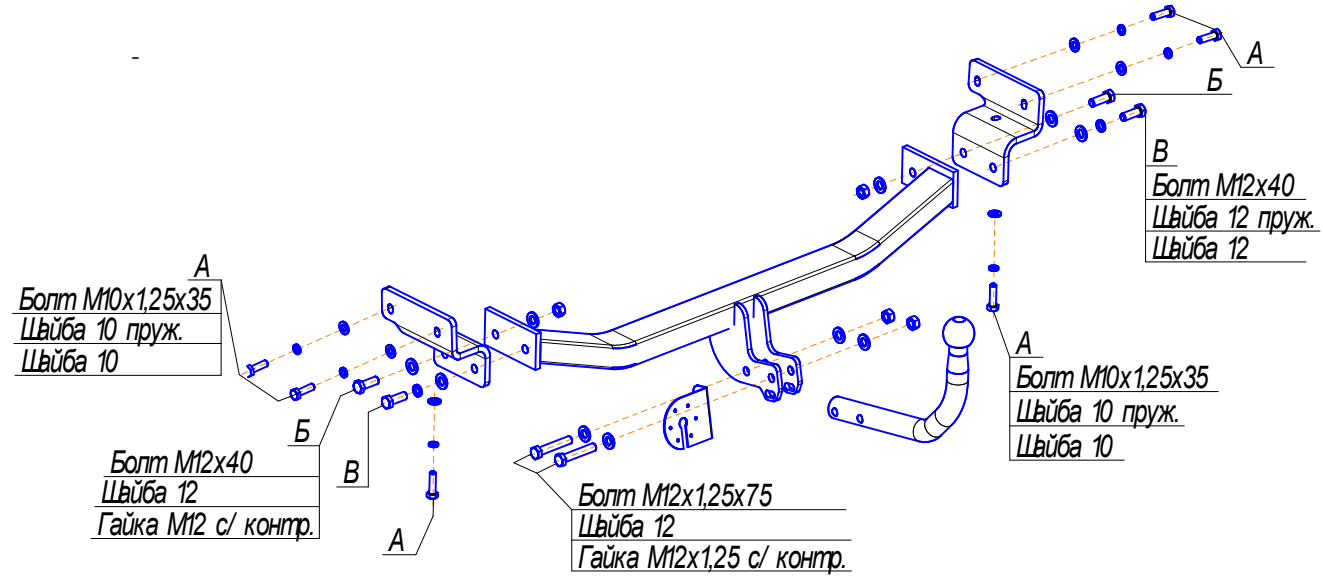

(1)

(2)

(3)

12—79(), 10—49().

1000

	1 .
	1 .
	1 .
	1 .
	1 .

	12 1,25 75	2 .
	12 40	4 .
	10 1,25 35	6 .
	12	2 .
	12 1,25	2 .
	12	2 .
	12	10 .
	10	6 .
	10	6 .
		3 .
		1 .
	190	1 .
	VH 0854	1 .
		1 .
		1 .
		1 .
		1 .

