

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 7351 А
для автомобилей
Land Rover
Freelander 2**

	2007-...
	1500
	50
	15.5



462800,

« - »

18

т. (35363) 7-05-06


факс: (35363) 7-13-20

т. (495) 785-66-07

www.bosal-autoflex.ru


« - »:	
" (8182) 22-48-15	
" 8(8442) 98-74-98	
" 8(343) 379-39-89, 373-42-73	
" 8(343) 26-88-308	
" 8(3952) 710-194	
" 8(495) 777-54-59	
" 8(495) 745-79-11	
" 8(495) 788-95-97	
" 8(495) 720-51-03	
" 8(3532) 57-99-85	
" 8-905-899-5012	
" 8(383) 291-59-60	
" 8(831) 279-53-24	
" 8(3422) 98-27-20	
" 8(342) 220-87-87	
" 8-927-002-90-06	
" 8(3462) 24-00-44	
" 8(3842) 21-14-76	
" 8-902-940-4151	
" 8(3452) 32-22-12, 41-52-62	
" 8-961-213-0278	
" 8-917-347-1700	
" 8(351) 269-44-75, 900-72-73	
" 8(3512) 773-76-91	

41.55-2005.

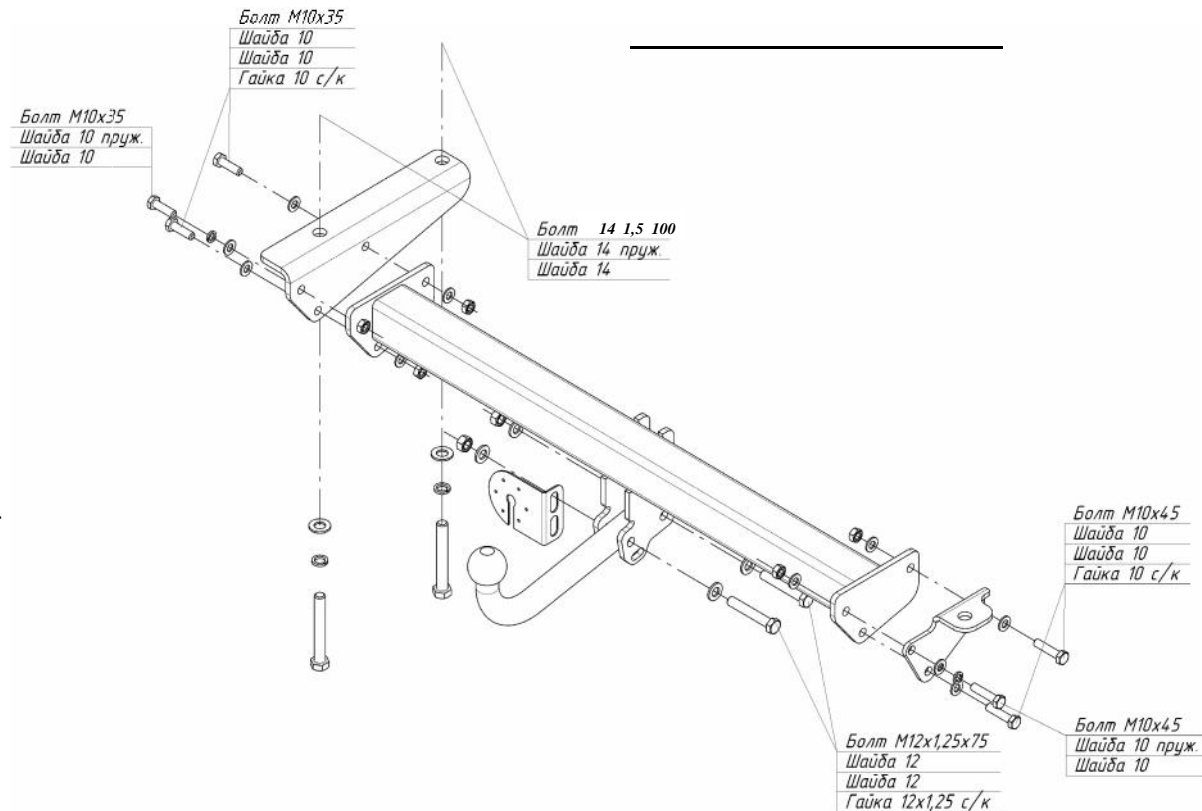

1			
2			
3			
4			
5			
6			

	1	.
	1	.
	1	.
	1	.

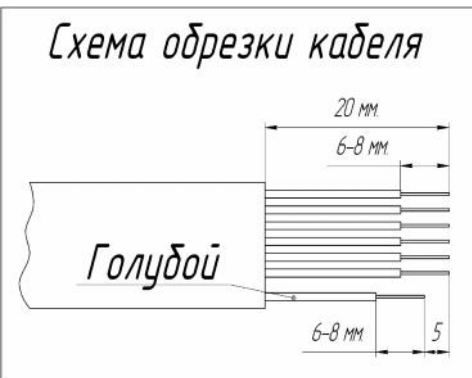

		3	.
10	35	3	.
10	45	3	.
12	1,25 75	2	.
14	1,5 100	2	.
10		4	.
12	1,25	2	.
10		2	.
14		2	.
10		10	.
12		4	.
14		2	.
VH0868		1	.
		1	.
		1	.
		1	.
	190	1	.
		1	.