

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 2852 А для автомобилей Suzuki Jimny

	1998/9 -
	1200
	50
	14,6



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

18

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.

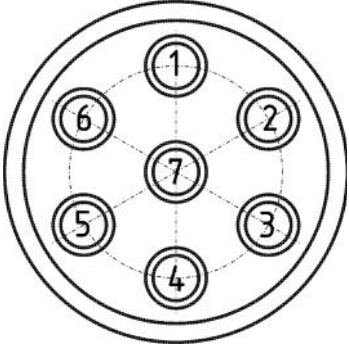
Болт М 12х40
Шайба 12 увелич.
Шайба 12 пруж.

Болт М 12х40
Шайба 12 увелич.
Шайба 12 пруж.

Болт М 12х1,25х90
Гайка М 12х1,25 с/ контр.
Шайба 12

	1 .
	1 .
	1 .

4 35	3 .
4	3 .
4	3 .
4	3 .
12 90	2 .
12 40	5 .
12 1,25 /	2 .
12	5 .
12	5 .
12	4 .
VH0866	1 .
	1 2 .
-2	2 1 .
-3	3 1 .
	4 2 .
	1 .
	1 .
	1 .
190	1 .
	1 .

			
1			
2			
3			
4			
5			
6			
7			

