

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 2143 А
для автомобилей
VW Touareg
Porsche Cayenne**

: VW Touareg	2002—...
Porsche Cayenne	2002—...
	1500
	75
	19.27



462800,

« - »

18

.: (35363) 7-05-06


./ : (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - »:
" (8182) 22-48-15
" 8(8442) 98-74-98
" " 8(343) 379-39-89, 373-42-73
" " 8(343) 26-88-308
" " 8(3952) 710-194
" " 8(495) 777-54-59
" " 8(495)745-79-11
" " 8(495) 788-95-97
" " 8(495) 720-51-03
" " 8(3532) 57-99-85
" " 8-905-899-5012
" " 8(383) 291-59-60
" " 8(831) 279-53-24
" " 8(3422) 98-27-20
" " 8(342) 220-87-87
" " 8-927-002-90-06
" " 8(3462) 24-00-44
" " 8(3842) 21-14-76
" " 8-902-940-4151
" " 8(3452) 32-22-12, 41-52-62
" " 8-961-213-0278
" " 8-917-347-1700
" " 8(351) 269-44-75, 900-72-73
" " 8(3512) 773-76-91

41.55-2005.

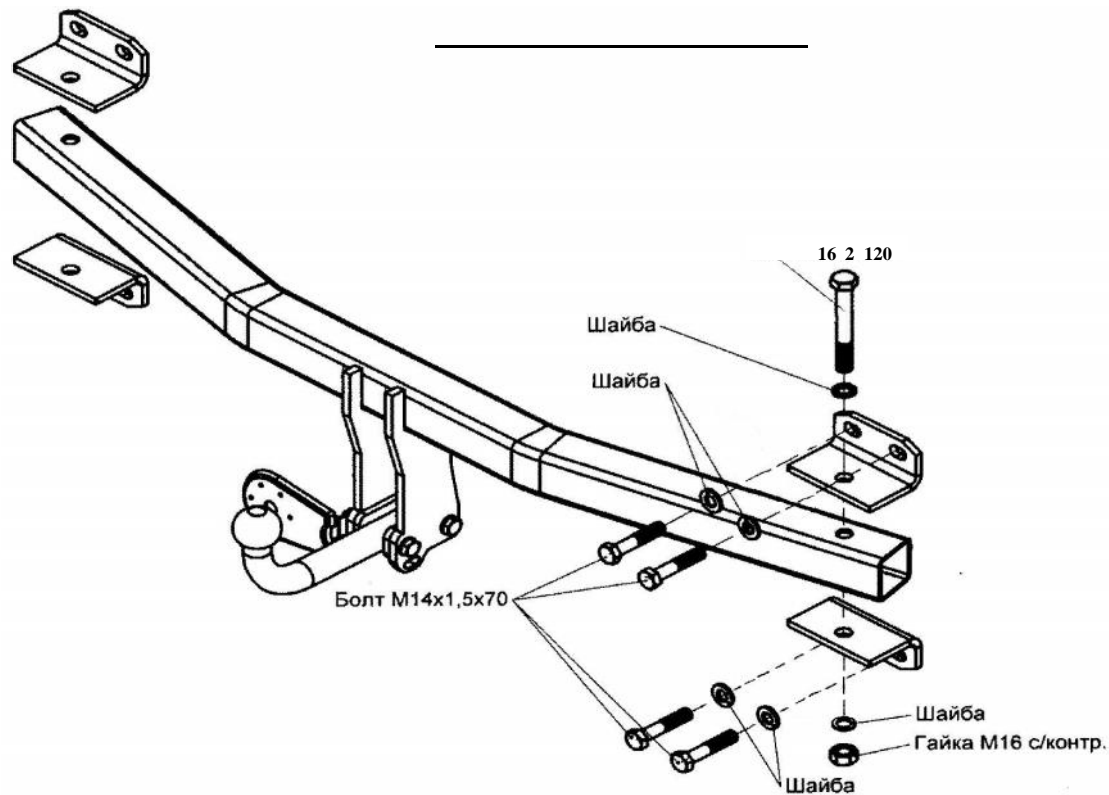

	1
	4
	1
	1

	3
12 1,25 90	2
16 2 120	2
12 1,25 /	2
16 /	2
12	4
14	8
16	4
14 1,5 70	8
14	8
	2
VH0220	1
	1
	1
	1
	1
190	1
	1
	1

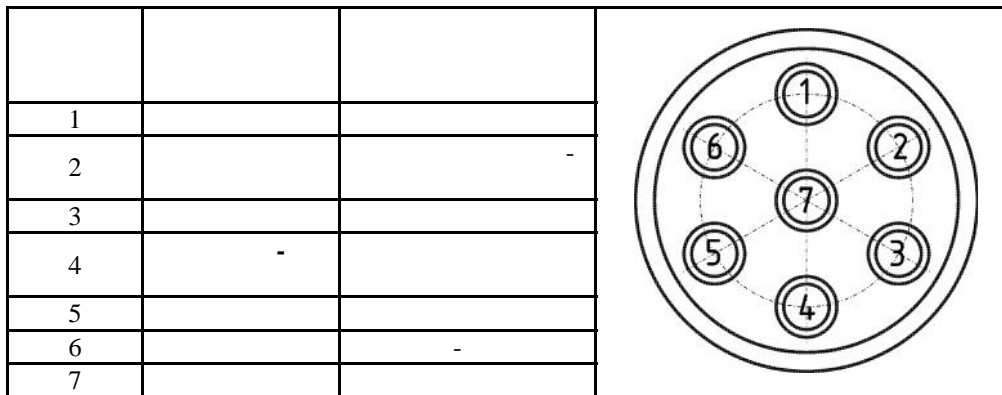


Схема обрезки кабеля

