

# bosal

**Инструкция по монтажу  
тягово-цепного устройства  
шарового типа 3068 А  
для автомобилей  
Toyota  
Avensis Wagon**

	2003—2009
	1500
	50
	17,8




462800,

« - »  
18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 799-13-46  
[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)  
[www.bosal.com](http://www.bosal.com)

« - »  
" " (8182) 22-48-15  
" " 8(8442) 98-74-98  
" " 8(343) 379-39-89, 373-42-73  
" " 8(343) 26-88-308  
" " 8(3952) 710-194  
" " 8(495) 777-54-59  
" " 8(495) 745-79-11  
" " 8(495) 788-95-97  
" " 8(495) 720-51-03  
" " 8(3532) 57-99-85  
" " 8-905-899-5012  
" " 8(383) 291-59-60  
" " 8(831) 279-53-24  
" " 8(3422) 98-27-20  
" " 8(342) 220-87-87  
" " 8-927-002-90-06  
" " 8(3462) 24-00-44  
" " 8(3842) 21-14-76  
" " 8-902-940-4151  
" " 8(3452) 32-22-12, 41-52-62  
" " 8-961-213-0278  
" " 8-917-347-1700  
" " 8(351) 269-44-75, 900-72-73  
" " 8(3512) 773-76-91

41.55-2005.

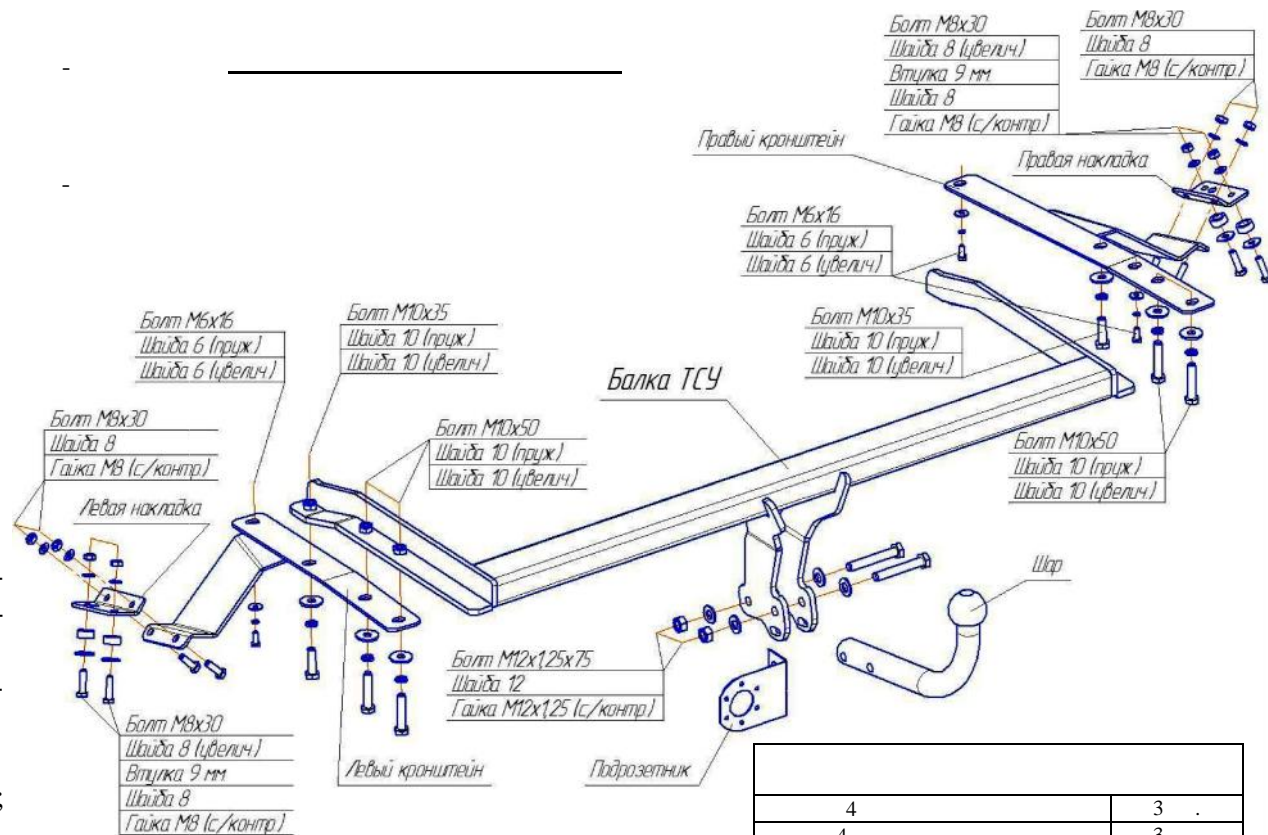

8=23Nm; 6=9Nm.

12=79Nm; 10=46Nm;

	1	.
	1	.
	1	.
	1	.
	1	.

4	3
4	3
4	3
4 35	3
8	8
12 1,25 /	2
10	6
10	6
8	4
12	4
12 1,25 75	2
10 50	4
10 35	2
6 16	3
8 30	8
L=9	4
8 /	8
6	3
6	3
	1
	1
VH 0844	1
	1
	1
	1
190	1
	1

