

bosal

**Инструкция по монтажу
тягово-цепного устройства
шарового типа 3040 V
для автомобилей
Toyota Land Cruiser Prado
Lexus GX470**

	2002/10-...
	2000
	100
	17.0



462800,

т. (35363) 7-05-06

ф. (35363) 7-13-20


(495) 785-66-07

www.bosal-autoflex.ru

18


« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

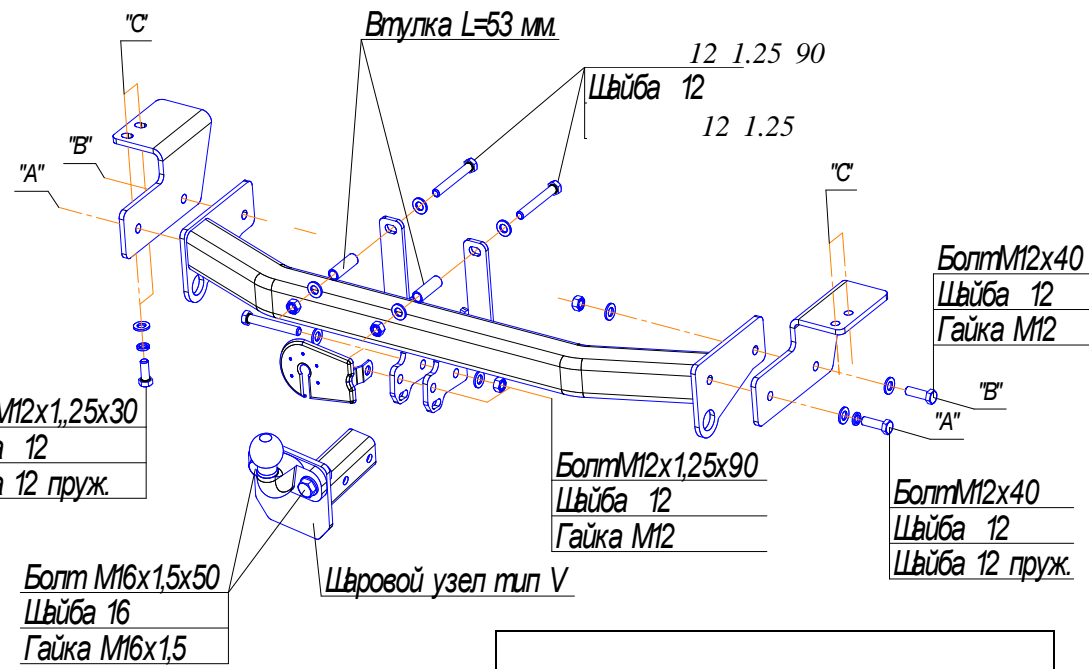


6 ()
 Ø18 («C»)
 12 30. ()
 «D» 10 (L=53)
 6 12 ()
 6.

1		
2		
3		
4		
5		
6		
7		

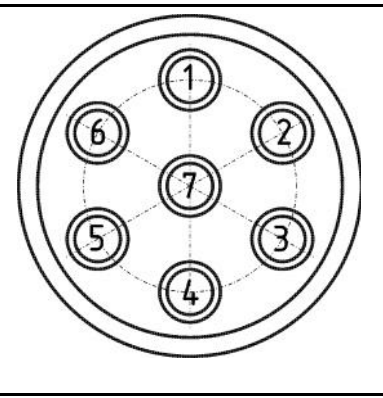

	1	
	1	
	1	
	1	
	1	
	1	
7805 V	1	

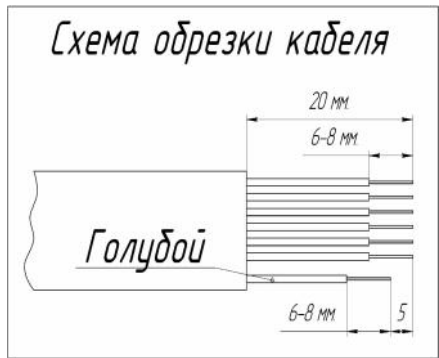

		3
12 1,25 /		4
12 /		2
12		18
12		6
12 1,25 30		4
12 40		4
12 1,25 90		4
L = 53		2
6 12 ()		2
6 .()		2
I F		1
16 1,5 50		2
16 1,5		2
16		4
		2
		1
		1
		1
		1
190		1
		1