

bosal

**Инструкция по монтажу
тягово-цепного устройства
шарового типа 1427 А
для автомобилей
Renault Sandero
Stepway**

	2010 -...
	1000
	50
	19,2



462800,


« - »
18
: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 785-66-07
www.bosal-autoflex.ru

« - »	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495) 745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91

41.55-2005.

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.

: 12—79Nm ; 10—46Nm.

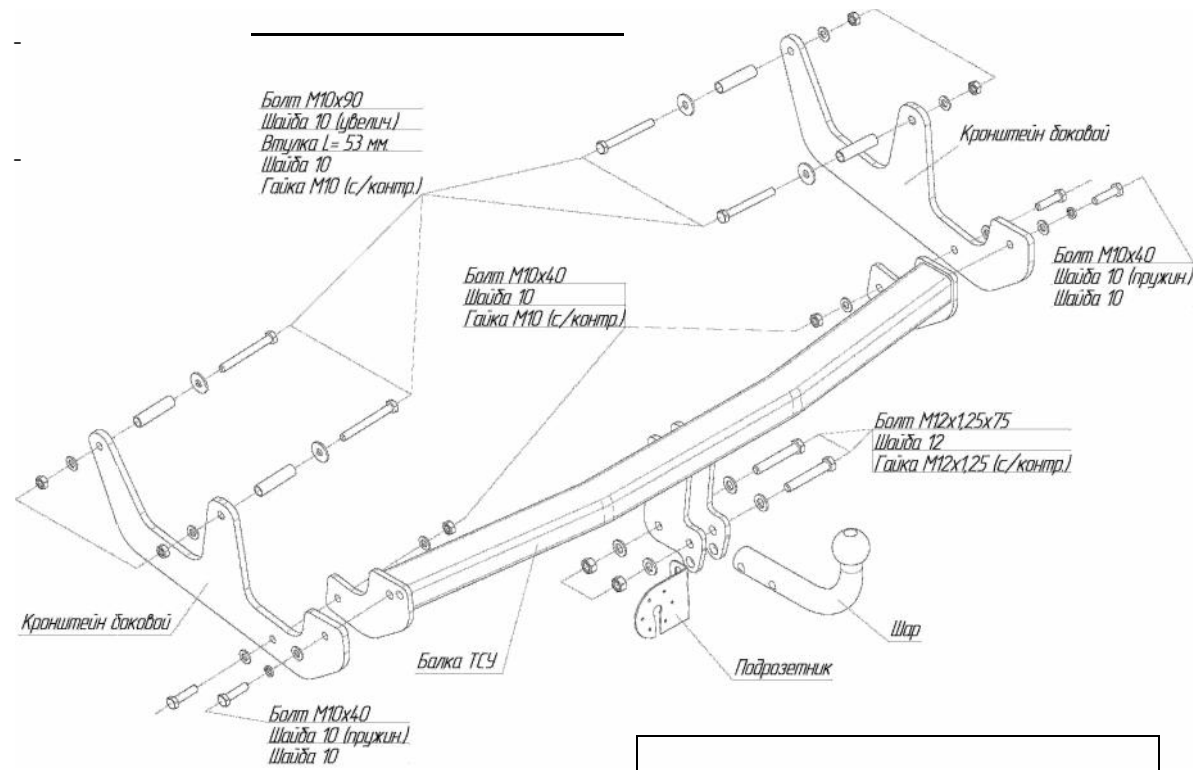

	1 .
	2 .
	1 .
	1 .

	4	3 .
	4	3 .
	4	3 .
	4 35	3 .
	&16 1,6 L = 53	4 .
	10 40	4 .
	10 90	4 .
	12 1,25 75	2 .
	10 /	6 .
	12 1,25 /	2 .
	10 (.)	2 .
	10	10 .
	10 (.)	4 .
	12	4 .
	VH 0138	1 .
		1 .
		1 .
		1 .
	190	1 .
		1 .
		1 .

